
GROUPS

User Guidance

Copyright© 2020 ALASKAR Technologies Confidential Information: This document contains the confidential and proprietary information of ALASKAR Technologies. Disclosure is restricted.



1. Groups.

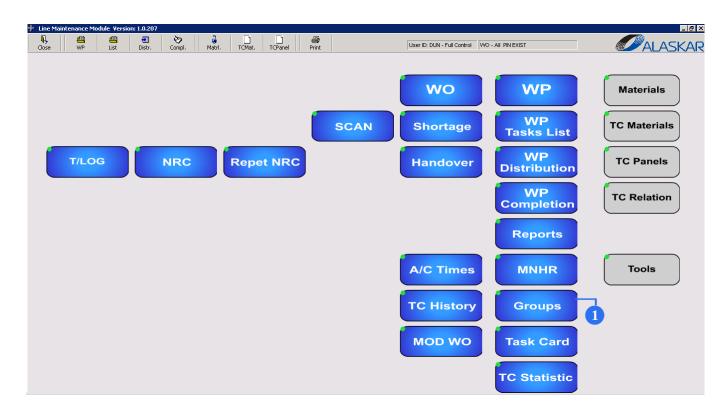

1. The Group sub-module generates printouts of task cards, which should be completed, for each engineering group. Click on the Groups button.



C = = = + \	0 (and i ∩n				····- ·· · ·		3			
Selectiv		der. ID, Close Stat	us, EA WO Num, C AC Reg		ESLBD	V Date, AC				•
Line W(WO Pad	ckage		i	:Under BMS	S	O	pen'	C 'Close'	
1420 1412 1404 1403	False False False	201109-AM000 201108-LM0004 201101-LM0007 201101-LM0006	201109-AM0007 201108-LM0004 201101-LM0007 201101-LM0006	0	01/12/2011	ESLBD ESLBD ESLBD	B737-300	FIRST # Perform	NRC: 110900 AID KIT IS OP NRC: 6173D DES NOT WO	1E Alf
•										•
									Cancel	

- 2. Select a Work Package ('WO Package') or a Work Order ('Line WO'). Use these tabs to switch between them.
- 3. Use these filters to find different documents quickly.
- 4. Select necessary line and double click.



Line W0 W0 Package 1A FUNCTIONAL/OPERATIONAL CHECKS EL+HYD 2A3 AFT CARGO OPEN 3A LH WING ACCESS PANELS OPEN 3B2 AFT WING AREA INSPECTION 4B2 AFT WING AREA INSPECTION 4B2 AFT WING AREA INSPECTION 4B2 AFT WING ACCESS PANELS REMOVE/OPEN 5A LH ENGINE ACCESS PANELS INSTALL/CLOSE 5A LH ENGINE ACCESS PANELS INSTALL/CLOSE 6A RH ENGINE ACCESS PANELS INSTALL/CLOSE 6A RH ENGINE ACCESS PANELS INSTALL/CLOSE 000 PRINT ALL GROUPS Back Cancel QUARTICLE ACCESS PANELS INSTALL/CLOSE 000 PRINT ALL GROUPS Back Cancel ALT - + Aetomatrueom QUARTICLE ACCESS PANELS INSTALL/CLOSE Back Cancel QUARTICLE ACCESS PANELS INSTALL/CLOSE Description: QUARTICLE ACCESS PANELS INSTALL/CLOSE QUARTICLE ACCESS PANELS INSTALL/CLOSE QUARTICLE ACCESS PA		TC Group to Print:		
2A3 AFT CARGO OPEN 5 3A LH WING ACCESS PANELS OPEN 3 3B2 AFT WING AREA INSPECTION 3 3B2 AFT WING AREA INSPECTION 3 4B2 AFT WING AREA INSPECTION 4 4B2 AFT WING AREA INSPECTION 4 4B2 AFT WING AREA INSPECTION 4 4B2 AFT WING ACCESS PANELS INSTALL/CLOSE 5 5A LH ENGINE ACCESS PANELS INSTALL/CLOSE 5 5A RH ENGINE ACCESS PANELS INSTALL/CLOSE 5 6F RH ENGINE ACCESS PANELS INSTALL/CLOSE 5 300 PRINT ALL GROUPS 5 Back Cancel OPENNIX ALL GROUPS Back Cancel OPENNIX ALL GROUPS OPENNIX AFT CARGO OPEN Jobcards Description:	Line ¥	WO Package		
Страница: 1 из 1 — + Автоматически + ЗС Страница: 1 из 1 — + Автоматически + ЗС Страница: 2A3 AFT CARGO OPEN Jobcards Description:	2A3 3A 3B2 4B2 4E 5A 5G 6A 6G	AFT CARGO OPEN LH WING ACCESS PANELS OPEN AFT WING AREA INSPECTION AFT WING AREA INSPECTION RH WING ACCESS PANELS INSTALL/CLOSE LH ENGINE ACCESS PANELS REMOVE/OPEN LH ENGINE ACCESS PANELS REMOVE/OPEN RH ENGINE ACCESS PANELS INSTALL/CLOSE RH ENGINE ACCESS PANELS INSTALL/CLOSE		
31 Jobcards Description:			Back	Cancel
Jobcards Description:	t	Страница: 1 из 1 – + Автоматически ÷	53	🔒 🖬 🖡
	3)			
U6-102-01 AFT CARGO COMPARTMENT - ACCESS PANELS AND DOORS - OPEN - INSPECT -		06-102-01 AFT CARGO COMPARTMENT - ACCESS PANELS AND		ISPECT -

5. After the WO/ WP selection, double click a group for which task cards will be printed out (pic. 5.1 Group Printout).