WORK PACKAGE DISTRIBUTION

User Guidance




Contents

1. How to distribute	
2. Tasks Descriptions	
3. ARA Materials List	. 8
4. Pick- Slip Option (or Printout)	. (
5. Non-Routine Cards Update and ARA Registration1	,




1. How to distribute.

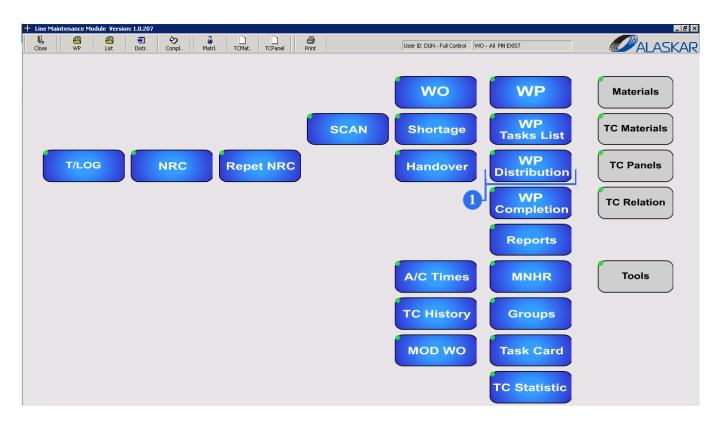

The distribution screen helps to distribute all the existing task cards, modifications, additional jobs, customer requests, non-routine cards and non-completed task items among mechanics. It also provides an ARA list (a list of required materials).


1. To enter a Distribution screen, click on the WP Distribution button.



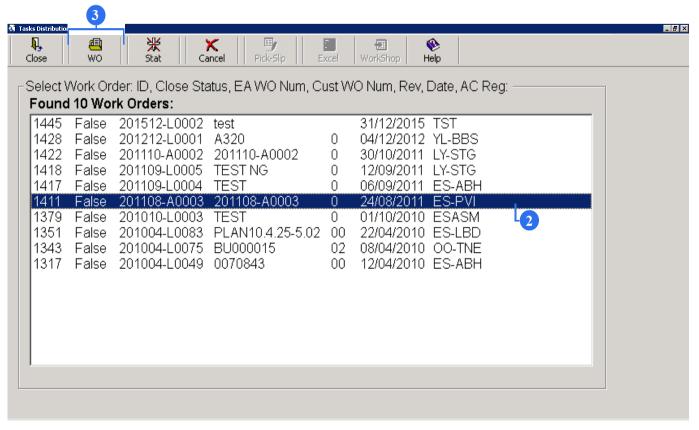

- 2. Select a necessary work order by highlighting it and then double click it.
- 3. To return again to the whole work orders list, click on the WO (work order) tool button.



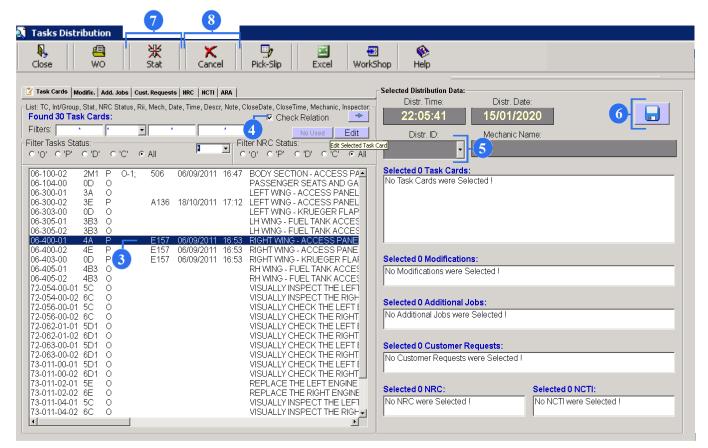


3. To distribute Task Cards/Modifications/Additional Jobs/Customer Requests/Non-Routine Cards/Non-Completed Task Items, highlight a task and click it, then this task will be displayed on Selected Distribution Data screen. Pay attention to a task status, because you can distribute only an opened task.

All tasks to be distributed will be displayed in a particular field in the Select Distribution Data Window (the selected tasks field, the selected modifications field, the selected additional jobs field, the selected customer requests field, the selected non-routine cards field, the selected non-completed task items field).

4. When the 'Check Relation' box is selected, all related tasks to the highlighted task will be displayed on the bottom.



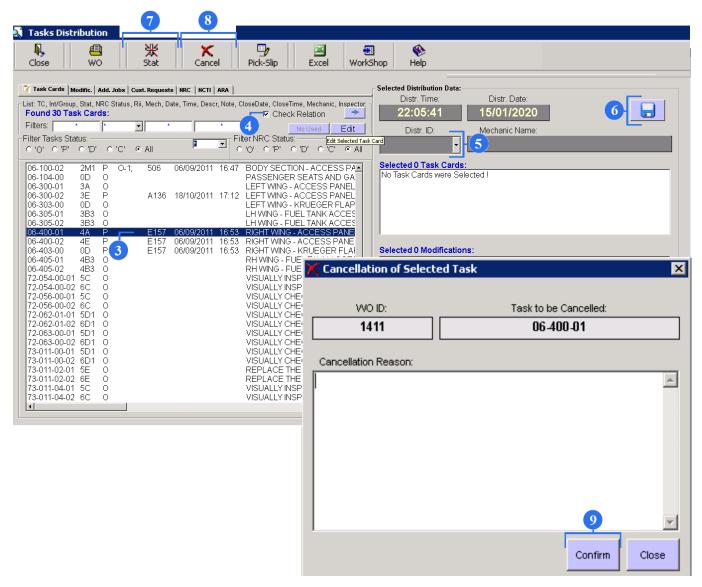

- 5. To appoint a particular mechanic on a selected task, choose mechanic's id.
- 6. Save it by clicking this button. After the confirmation a task status will be changed from 'O' (open) to 'P' (in progress).
- 7. To open a task in progress, click on the STATUS tool button and confirm it.

Or if you wrongly closed a task, click on the STATUS tool button and the task will be in process.


8. You may cancel an opened task, if it is reasonably needed.

For doing this, highlight an opened task, then click on the CANCEL tool button.

9. In the Cancelation Window enter a WO number and cancelation reasons. Click on this button to save it.




2. Tasks Descriptions.

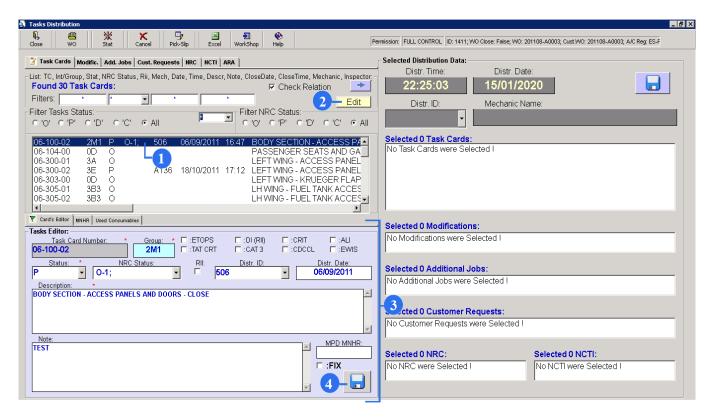

- 1. You may add descriptions to a particular task. For this action highlight a task.
- 2. Click on the "Edit" button.
- 3. In the Tasks Editor make necessary descriptions and notes.
- 4. To save, click on this button.




3. ARA Materials List.

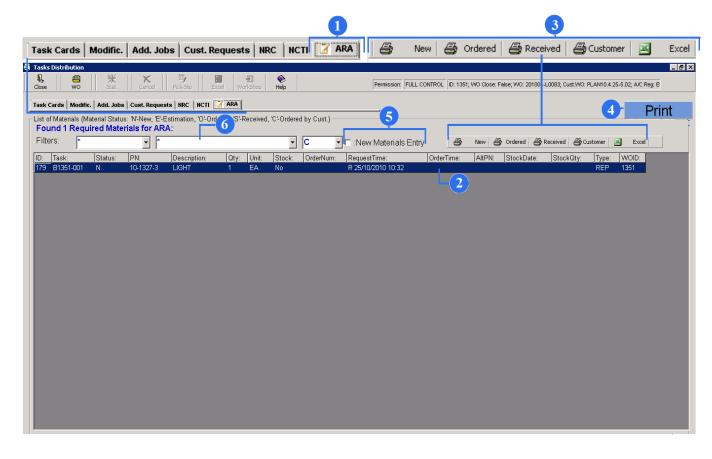

- 1. Select ARA tab.
- 2. ARA (materials which are needed for NRC completion) will be displayed only in case when a non-routine card is registered, where a mechanic makes a materials request (for details, view the 'NRC Registration' part). Materials are at stock are green; Materials are not at stock are red.
- 3. When you have a complete materials list, you may print out new materials/ordered materials/reserves materials/customer materials or transfer to excel by clicking these tabs.
- 4. Click on the PRINT button to print out a logistic report.
- 5. To display newly required materials, tick the New Materials Entry field.
- 6. You may also use filter to find a certain material. In the filter id field type a material's number.




4. Pick- Slip Option (or Printout).

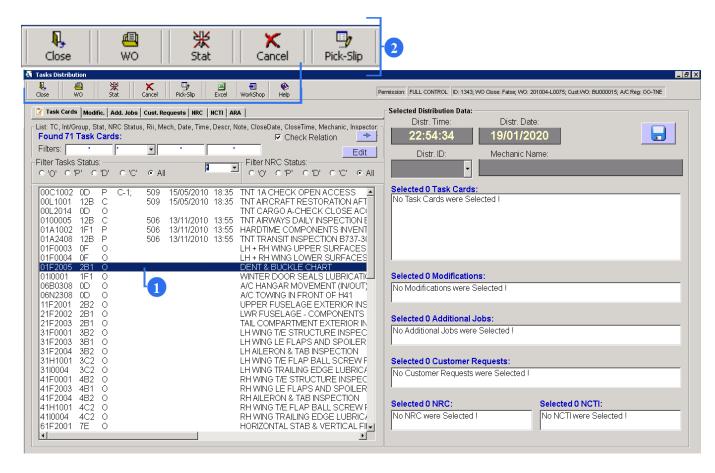

- 1. Highlight a task.
- 2. Click on the Pick-Slip tool button. And the Registration of Pick-Slip Window will be opened.



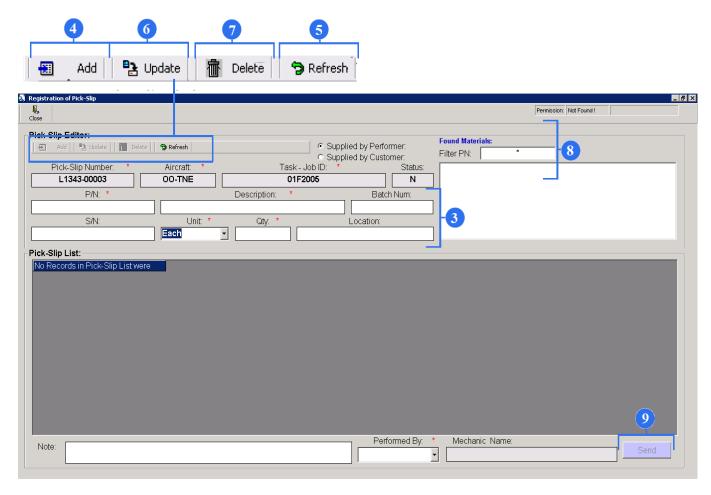


3. Fill required text boxes (a part number, a description, a batch number, a unit, a quantity, a location, by whom supplied and who performed a pick-slip list)

A pick-slip number, an aircraft, a task-job id and status will be appointed automatically.

- 4. After filling out text boxes, click on the ADD button and a just registered material will be displayed in a Pick-Slip list.
- 5. To reset a Pick-Slip Editor, click on the REFRESH button.
- 6. To make changes in an already existed Pick-Slip List, click on the UPDATE button and confirm it.
- 7. To delete a selected item from the Pick-Slip List, click on the DELETE button.
- 8. Use a filter if you need.
- 9. To print out the Pick-Slip List, click on




5. Non-Routine Cards Update and ARA Registration.

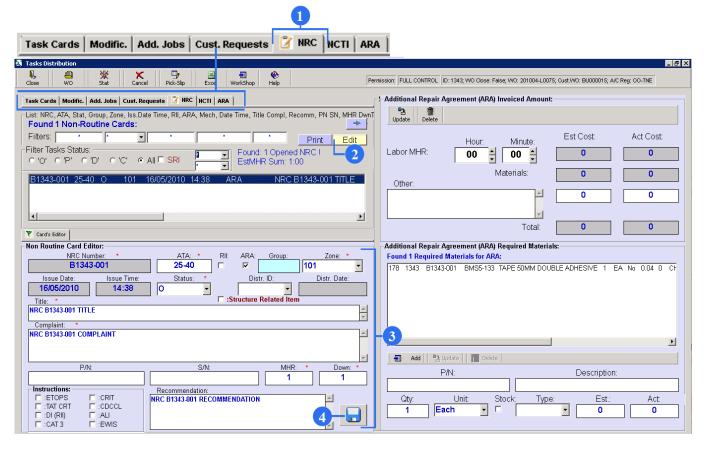

Here, in the WP Distribution sub-module, all NRC, registered in the WP Completion sub-module, are displayed.

- 1. Select NRC tab.
- 2. Highlight the line and click on the EDIT button.
- 3. Fill the text boxes in the Non-Routine Job Editor.
- 4. Click on this button to save.



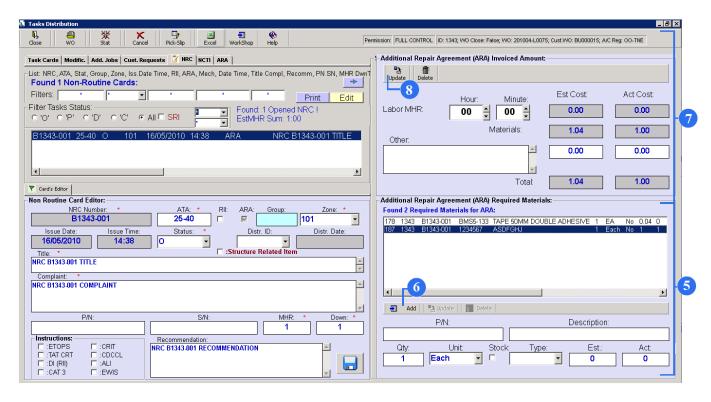

- 5. In the ARA Required Materials Screen enter P/N, Description, Qty, Unit, Type of materials and Est and Act.
- 6. To save this data click on the Add button.
- 7. In the ARA Invoiced Amount enter Est Cost and Act Cost.
- 8. Push on the Update button.