WORK PACKAGE TASKS LIST

User Guidance

Copyright© 2020 ALASKAR Technologies Confidential Information: This document contains the confidential and proprietary information of ALASKAR Technologies. Disclosure is restricted.




Contents

1.	WP Tasks List Registration Overview.	.3
	WP Tasks List Creation	
3.	Task Cards Source Selection/Creation	10
4.	Task Card Addition and Update	13
5.	WP Tasks List and Task Cards Printout.	16



1. WP Tasks List Registration Overview.

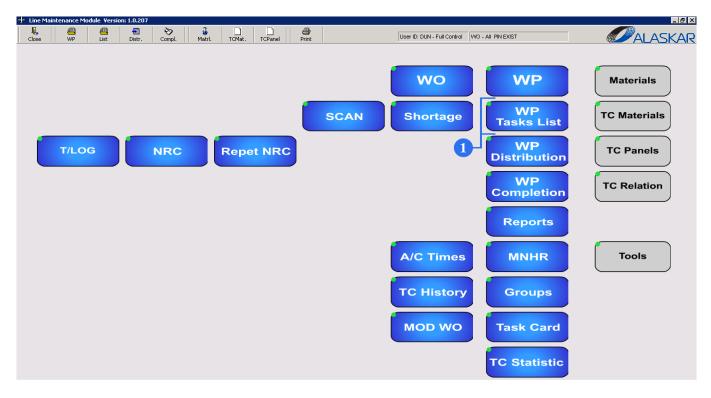

A WP Tasks List is a well-organized specialized set of activities that have to be done during a plane inspection (A-Check and B-Check). A Work Package List combines Task Cards, Modifications and Additional Jobs.

1. To enter a WP Tasks List Screen, click on the WP Tasks List button.



2.Toolbar:

- Close (exit the program).

- WO (Work Order Selection).

Source button menu (creation or selection sources of Task
 Cards/Modifications/Additional Jobs)

Print:

- a maintenance visit tally sheet,

- a task card visit list,
- a list of alterations,

- a list of additional Jobs.

3. You may also use a work order filter to select either opened or closed work orders.

		2						
ose	4 WO	Source Print	Nelp					
elect WO): ID, Sta	tus, EA WO Num, C	Cust WO Num, Re	v, Date, AC F	Reg:			
Found 20	Work O	rders:		• 'Open'	© 'CI	ose'		
33079	False	202001-L0003			3			•
33078	False	202001-L0002						
33077	False	202001-L0001						
1456	False	201801-L0001						
1445	False	201512-L0002	test		31/12/2015	TST	CRJ700	
1439	False	201512-A0001						
1428	False	201212-L0001	A320	0	04/12/2012	YL-BBS	A320-100	
1426	False	201205-L0002	NEW	0	30/05/2012	ES-ABH	B737-500	
1425	False	201205-L0001	201205-L0001	1 0	30/05/2012	ES-ABH	B737-500	
1422	False	201110-A0002	201110-A0002	20	30/10/2011	LY-STG	B737-700	
1421	False	201110-L0001						
1418	False	201109-L0005	TEST NG	0	12/09/2011	LY-STG	B737-700	
1417	False	201109-L0004	TEST	0	06/09/2011	ES-ABH	B737-500	
1411	False	201108-A0003	201108-A0003	30	24/08/2011	ES-PVI	LJ-60	
1410	False	201108-A0002	201108-A0002	20	24/08/2011	ES-PVI	LJ-60	
1379	False	201010-L0003	TEST	0	01/10/2010	ESASM	S340	-



2. WP Tasks List Creation.

se	₽ wo	Source Print	Nelp					
elect WC): ID, Sta	tus, EA WO Num, C	Cust WO Num, Re	v, Date, AC	Reg:			
ound 20	Work O	rders:		⊙ 'Open'i	C 'Cl	ose'		
33079	False	202001-L0003						_
33078	False	202001-L0002						
33077	False	202001-L0001		•				
1456	False	201801-L0001		Y				
1445	False	201512-L0002	test		31/12/2015	TST	CRJ700	
1439	False	201512-A0001						
1428	False	201212-L0001	A320	0	04/12/2012	YL-BBS	A320-100	
1426	False	201205-L0002	NEW	0	30/05/2012	ES-ABH	B737-500	
1425	False	201205-L0001	201205-L0001	1 0	30/05/2012	ES-ABH	B737-500	
1422	False	201110-A0002	201110-A0002	20	30/10/2011	LY-STG	B737-700	
1421	False	201110-L0001						
1418	False	201109-L0005	TEST NG	0	12/09/2011	LY-STG	B737-700	
1417	False	201109-L0004	TEST	0	06/09/2011	ES-ABH	B737-500	
1411	False	201108-A0003	201108-A0003	30	24/08/2011	ES-PVI	LJ-60	
1410	False	201108-A0002	201108-A0002		24/08/2011	ES-PVI	LJ-60	
1379	False	201010-L0003	TEST	0	01/10/2010	ESASM	S340	-

1. Click the WO tool button and select a necessary Work Order from a WO list (all registered work packages in the WP sub-module will be displayed).

2. Highlight a selected Work Order and open it by double clicking.



Task Cards Modifie	ations Additional Jobs I	IRC Template				Tasks Source: Source: LineLibrary_				-
lected Tasks:					→ t >	Found 1504 New Tas	k Cards: T	able: SourceE	stonian737500	,
ter TC:	Group: Reference:	Note:	Instruction:	Print		Filter TC:	Group: Reference:	Note: Inst	ruction:	
*		*	*	E	Edit <	*		* *	•	Add Edit
Base TC:	Description	: <u> </u>				Base TC:	Description:			
	1						· ·			
	05-00-00-BMA1 12E			T AN ARRIVAL	AND	05-00-00-BMA3	05-00-00-BMA3		INSP	DAMAGE COL
	06-100-02 2M			TION - ACCES		06-100-01	06-100-01	2A1	OPEN	BODY SECTIC
8-101-01	06-101-01 2A	2 OPEN	FURWARD	CARGO COM	AKI	06-101-02	06-101-02	2M2 2A3	CLOSE OPEN	FORWARD C
						06-102-01 06-102-02	06-102-01 06-102-02	2A3 2M3	CLOSE	AFT CARGO (AFT CARGO (
						06-102-02	06-102-02	21VI3 1E1	OPEN	PASSENGER
						06-103-02	06-103-02	1E3	CLOSE	PASSENGER
						06-103-02	06-103-02	1E3 1E1	OPEN	PASSENGER
						06-103-04	06-103-04	1E3	CLOSE	PASSENGER
						06-104-00	06-104-00	0D	OPEN	PASSENGER
						06-300-01	06-300-01	3A	OPEN	LEFT WING - A
						06-300-02	06-300-02	3E	CLOSE	
						06-303-00	06-303-00	0D	OPEN	LEFT WING - F
						06-305-01	06-305-01	3B3	OPEN	LH WING - FUI
						06-305-02	06-305-02	3B3	CLOSE	
						06-400-01	06-400-01	4A	OPEN	RIGHT WING -
						06-400-02	06-400-02	4E	CLOSE	RIGHT WING -
						06-403-00	06-403-00	٥D	OPEN	RIGHT WING -
						06-405-01	06-405-01	4B3	OPEN	RH WING - FU
						06-405-02	06-405-02	4B3	CLOSE	RH WING - FU
						06-500-01	06-500-01	5A	OPEN	LEFT POWER
						06-500-02	06-500-02	5G	CLOSE	LEFT POWER
						06-600-01	06-600-01	6A	OPEN	RIGHT POWEI
						06-600-02	06-600-02	6G	CLOSE	RIGHT POWEI
						06-700-01	06-700-01	7A	OPEN	EMPENNAGE -
					•					Þ

3. Emerged screen provides a particular set of tasks. These tasks are listed in Task Cards, Modifications and Additional Jobs.

4. The screen shows a Tasks Source which is used for easy tasks selection.

5



Base TC: Description: 05:00:00:BMA1 12B INSP CARRY OUT AN ARRIVAL AND BODY SECTION - ACCESS PAI 06:101:01 06:100:02 2M1 CLOSE BODY SECTION - ACCESS PAI 06:101:01 06:100:01 06:100:02 00:101:02 2M2 CLOSE FORWARD CARGO COMPART 70 06:100:01 06:101:02 2M2 CLOSE FORWARD CARGO COMPART 10:10:01 06:101:02 2M2 CLOSE FORWARD CARGO COMPART 06:102:01 06:102:02 2M3 CLOSE FORWARD CARGO COMPART 10:10:01 06:101:02 2M2 CLOSE FORWARD CARGO COMPART 06:102:02 06:102:02 2M3 CLOSE AFSENGE 10:10:02 06:103:02 11:3 OPEN AFT CARGO 06:103:02 11:3 OPEN PASSENGE 10:10:02 06:103:03 16:103:04 06:103:04 16:30:04 06:300:01 3A OPEN PASSENGE 10:10:02 06:300:01 06:300:01 3A OPEN LEFT WING FORWARD 06:300:01 3A OPEN LEFT WING <th>VP Task List Editor</th> <th>s NRC Template </th> <th></th> <th></th> <th></th> <th></th> <th></th> <th>-</th>	VP Task List Editor	s NRC Template						-
Instruction Print Image: Concent of the concent of		Permission: F		: 1426; WO Close: Fa	alse; WO: 20120	5-L0002; Cust	.VVO: NEVV; A	/C Reg: ES-ABH
Iter TC: Group: Reference: Note: Instruction: Base TC: Description: -			Source Found	LineLibrary_AME		Table: Source	Estonian737500	, 4
05-00-00-02 2M1 CLOSE BODY SECTION - ACCESS PAI 06-100-02 06-101-01 2A2 OPEN FORWARD CARGO COMPART 06-101-01 06-101-01 2A1 OPEN FORWARD CARGO COMPART 07 06-100-02 06-101-02 2M2 CLOSE FORWARD CARGO COMPART 06-101-01 06-101-01 2A3 OPEN AFT CARGO 06-102-02 06-102-02 2M3 CLOSE AFT CARGO 06-103-02 06-103-02 1E3 CLOSE PASENGE 06-103-02 06-103-02 1E3 CLOSE PASENGE 06-103-02 06-103-04 1E3 CLOSE PASENGE 06-104-00 06-104-00 0D OPEN PASENGE 06-303-01 06-303-01 163 OPEN PASENGE 06-303-02 06-303-02 163 OPEN PASENGE 06-303-01 06-303-01 06-303-01 183 OPEN PEN 06-303-02 06-303-02 06-303-02 3E CLOSE PASENGE 06-303-02 06-303-00 06-303-02	ilter TC: Group: Reference: Note: Instruction:		< Filter TC	*	*	Note: In * *		Add Edit
06-700-01 06-700-01 7A OPEN EMPENNAC	06-100-02 06-100-02 2M1 CLOSE BODY S 06-101-01 06-101-01 2A2 OPEN FORWA	ÉCTION - ACCESS PAI RD CARGO COMPART	US-000 06-10 06-10 06-10 06-10 06-10 06-10 06-10 06-10 06-10 06-10 06-10 06-10 06-30 06-40 06-40 06-50 06-50 06-50 06-50 06-50 06-50 06-60 06-60 06-70	0-01 1-02 2-01 2-02 3-01 3-02 3-03 3-04 4-00 0-01 0-02 3-00 5-01 5-02 0-01 0-02 3-00 5-01 5-02 0-01 0-02 0-02 0-01 0-02 0-02 0-01 0-02	06-100-01 06-102-01 06-102-02 06-103-01 06-103-02 06-103-03 06-103-03 06-103-03 06-103-04 06-300-01 06-300-01 06-300-01 06-405-01 06-405-01 06-500-01 06-500-01 06-600-01	2A' 2M: 2A: 2M: 2M: 1E' 1E' 1E' 1E' 1E' 3A 3E 0D 3B: 3B: 3B: 3B: 3B: 4A 4E 4B: 4B: 4B: 5A 6A 6G 6G	I OPEN CLOSE OPEN CLOSE OPEN CLOSE OPEN CLOSE OPEN CLOSE OPEN CLOSE OPEN CLOSE OPEN CLOSE OPEN CLOSE OPEN CLOSE OPEN CLOSE	DAMAGE COL BODY SECTIC FORWARD C, AFT CARGO (AFT CARGO (PASSENGER PASSENGER PASSENGER PASSENGER LEFT WING - H LEFT WING - FUI LH WING - FUI LH WING - FUI RIGHT WING - RIGHT WING - RIGHT WING - RIGHT WING - RIGHT WING - RIGHT POWEI RIGHT POWEI RIGHT POWEI RIGHT POWEI RIGHT POWEI RIGHT POWEI RIGHT POWEI RIGHT POWEI

5. Task Cads/Modifications/Additional Jobs Tab/ NRC Template. To choose a necessary set of task, click on Task Cads or Modifications or Additional Jobs or NRC Template.

6. Status bar.

7. Transfer bar.



e WO Source Print Help	Permission:	FULL CONTROL DD: 1	426; WO Close: False; WO: 20	1205-L0002; Cust	WO: NEW; A/C Re	g: ES-ABH
Task Cards Modifications Additional Jobs NRC Template	Sour	(s Source: rce: LineLibrary_/				
lected Tasks:	> Four	nd 1504 New Task	: Cards:	Table: Source	ceEstonian73750	
ter TC: Group: Reference: Note: Instruction:		TC:	Group: Reference:	Note:	Instruction:	
× × × × Edit	< -12	*	× ×		-	Add Edit
Base TC: Description:		Base TC:	Description:	·		
* *	>> +10	*	*			
5-00-00-BMA1 05-00-00-BMA1 12B INSP CARRY OUT AN ARRIVAL AND		00-00-BMA3	05-00-00-BM	IA3 OF	- INSP	DAMAGE COI
6-100-02 06-100-02 2M1 CLOSE BODY SECTION - ACCESS PAI		100-01	06-100-01	27		BODY SECTIO
6-101-01 👷 06-101-01 🛛 2A2 OPEN FORWARD CARGO COMPART	06-	101-02	06-101-02		v12 CLOSE	
		102-01	06-102-01		A3 OPEN	AFT CARGO (
	-00	102-02	06-102-02	21		E AFT CARGO (
-		103-01	06-103-01	1E		PASSENGER
		103-02	06-103-02	16		
		103-03	06-103-03	1E		PASSENGER
		103-04	06-103-04	1E		
		104-00	06-104-00	00		PASSENGER
		300-01	06-300-01	3/		LEFT WING - A
		300-002	06-300-02		E CLOS	
		303-00	06-303-00]0		LEFT WING - K
				38		LH WING - FUI
		305-02	06-305-02	3E		
		400-01	06-400-01	4/		RIGHT WING -
		400-02	06-400-02	48		
		403-00	06-403-00 06-405-01	0[RIGHT WING -
		405-01 405-02	06-405-01	4E 4F		RH WING - FU F RH WING - FU
		405-02 500-01	06-500-01	4t 5/		LEFT POWER
		500-01	06-500-02	ට/ 50		E LEFTPOWER
		600-02	06-600-01	50 6/		RIGHT POWER
		600-02	06-600-02	60		
		700-02	06-700-01	74		EMPENNAGE
	100-	700-01	00-700-01	17	A OFEN	
Related TC:						
Transfer Note Excel						

8. To transfer a task from Task Cards to a Tasks Source, highlight the task.

9. Then click on the right checkmark button to transfer one task to a Task Source (the task will be transferred, not copied).


10. To transfer all the tasks from Task Cards to a Task Source click on the double right checkmark button.

11. To transfer a task from a Task Source to Task Cards, highlight the task at first.

12. Then click on the left checkmark button to transfer one task to Task Cards (the task will be transferred, not copied).

13. To transfer all the tasks from a Task Source to Task Cards, click on double left checkmark button.



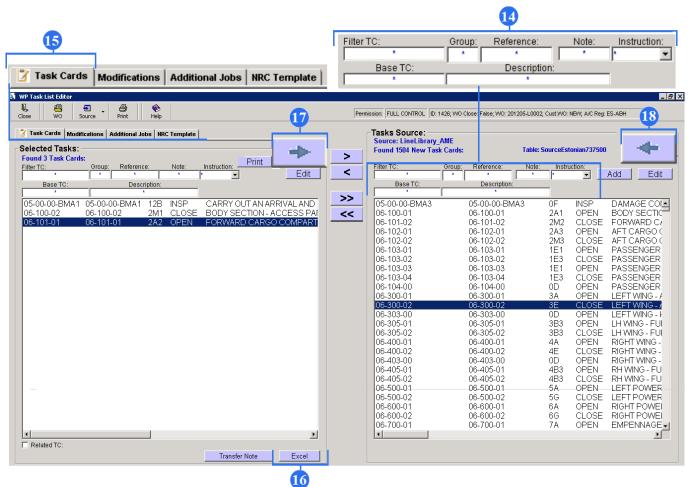

14. You may use a FILTER to find a certain task. Type a task number in the Id field and then press ENTER.

15. If you want to return to the whole tasks list, click on Task Cards.

16. You may open Task Cards in MS Excel format by pressing the EXCEL button.

17. If you want to extend a Task Cards screen, click on the left arrow button.

18. If you want to extend a Tasks Source screen, click on the right arrow button.




3. Task Cards Source Selection/Creation.

1	
🗱 WP Task List Editor	
R	
WP Task List Editor Select Source Table	
N. E VO Source Print Help	Permission: FULL CONTROL ID: 1418; WO Close: False; WO: 201109-L0005; Cust.WO: TEST NG; A/C Reg: LY-STG
Select Source Table	
Task Cards Modifications Additional Jobs NRC Template	Tasks Source: Source: LineLibrary AME
Selected Tasks:	Found 1504 New Task Cards: Table: SourceRvanair737NG BMS
Found 44 Task Cards:	
Filter TC: Group: Reference: Note: Instruction:	Filter TC: Group: Reference: Note: Instruction:
Base TC: Description:	Base TC: Description:
000-NG-EZY-FL01 000-NG-EZY-FL01 12B SERV EASYJET - BASE DEFE 000-NG-EZY-FL02 000-NG-EZY-FL02 0F SERV EASYJET - OUT OF PH/	
000-NG-EZY-FL02 000-NG-EZY-FL02 0F SERV EASTJET-0010F PH	
000-NG-EZY-FL04 000-NG-EZY-FL04 1D1 INSP EZY CREW & PORTABL	
000-NG-EZY-FL05 000-NG-EZY-FL05 0A SERV EASYJET - APU HOURS	
000-NG-EZY-FL06 000-NG-EZY-FL06 12B SERV EASYJET - PRE-DEPAR	
000-NG-EZY-FL07 000-NG-EZY-FL07 12B SERV EASYJET/GO-POST-H/	
000-NG-EZY-FL09 000-NG-EZY-FL09 0F INSP AIRCRAFT MAPPING (P 00AWN-UK-12-54 00AWN-UK-12-54 12B SERV COCKPIT WINDOW CLE	
00EZY-01 00EZY-01 0F SERV COCKPIT WINDOW CLE	
00-EZY-01 00-EZY-02 0F SERV CHECK ARCRAFT EC	
00-EZY-03 00-EZY-03 0F INSP CHECK EXPIRY DATES	
05-023-00-02 05-023-00-02 12B SERV GER TC: DAILY CHECK	
05-RYR-08 05-RYR-08 12B SERV RAMP 1 & TRANSIT PRE	
05-RYR-09 05-RYR-09 0F INSP AIRFRAME - EXTERNAL	
06-100-01 06-100-01 2A1 OPEN BODY SECTION - ACCE	
06-100-02 06-100-02 2M1 CLOSE BODY SECTION - ACCE	
06-104-00 06-104-00 0B OPEN PASSENGER SEATS AT	
06-120-01 06-120-01 2A2 OPEN FORWARD CARGO COI 06-120-02 06-120-02 2M2 CLOSE FORWARD CARGO COI	
06-120-02 06-120-02 2M2 CLOSE FORWARD CARGO COI 06-140-01 06-140-01 2A3 OPEN AFT CARGO COMPART	
06-140-01 00-140-01 2AS OPEN AFT CARGO COMPART 06-140-02 06-140-02 2M3 CLOSE AFT CARGO COMPART	
06-240-01 06-240-01 1E1 OPEN PASSENGER CABIN FL	
06-240-02 06-240-02 1E3 CLOSE PASSENGER CABIN FL	
06-240-03 06-240-03 1E1 OPEN PASSENGER CABIN FL -	
Related TC:	
Transfer Note Excel	

 You may select a source of Task Cards or create your own for easy operating process.
 For these actions click on the Source button menu and choose further action (Create Source Table or Select Source Table).

Confirm a selection or a creation.



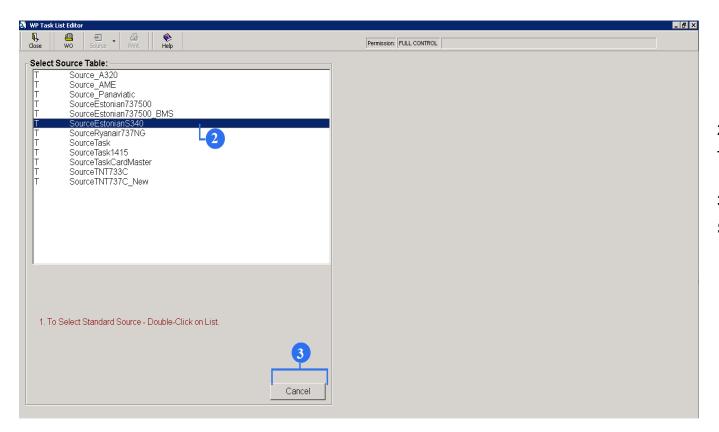

2. Choose a Tasks Source in a Select Source Table, highlight it and double click it.

3. Press the cancel button to exit a Select Source Table.



WP Task List Editor WP Case Barrow Barrow Barrow Cose WO Source Print Help			Permission: FULL CONTROL			_ @ X
Select Source Table:		Check	C Source Fields:-			
T Source_A320 T Source_AME T Source_Panaviatic T SourceEstonian737500_BMS T SourceEstonian3340 T SourceRyanair737NG T SourceTask T SourceTask1415 T SourceTaskCardMaster T SourceTaskCardMaster T SourceTNT733C T SourceTNT737C_New		0 1 2 3 4 5 6 6 7 7 8 9 10 11 12 13 14 15 16 17 18 19	ID TaskCard Base_TaskCard Interval Description Note JobType Skill MaintReq Group AvgHours AvgHours AvgHours AvgWO Source AvgHoursNRJ AvgMinuteNRJ AvgSumNRJ QtyNRJ		4	
1. To Select Standard Source - Double-Click on List.	Cancel	20 21 22 23 24 25 26	GIVNRJTC ETOPS TAT CRT DI CAT_3 CR CDCCL	Success I Click OK Button to F	Proceed I	ск Ок

4. After clicking on a selected Task Source, a Select TC Source Field screen appears on the right side of the pilot generation screen. Click on TC Source fields one by one to select appropriate fields.

5. Press OK to cancel.



4. Task Card Addition and Update.

VP Task List Editor		Add Edit
Ng 🕘 📆 🍰 🅎		Permission: FULL CONTROL D: 1411; WO Close: False; WO: 201108-A0003; Cust.WO: 201108-A0003; AIC Reg: ES-F
Task Cards Modifications Additional Jobs NRC Templa Selected Tasks: Found 30 Task Cards:	Add	Source: Edit LineLibrary_AME 477 New Task Cards: Table: SourceEstonian737500
Filter TC: Group: Reference: Note: Base TC: Description: *<	BODY SECTION - ACCESS PAN- PASSENGER SEATS AND GAL LEFT WING - ACCESS PANELS LEFT WING - ACCESS PANELS LEFT WING - ACCESS PANELS LEFT WING - RULE TANK ACCESS H WING - FUEL TANK ACCESS RIGHT WING - ACCESS PANEL RIGHT WING - CLE TANK ACCESS WING - FUEL TANK ACCE	Oroug: Reference: Note: Instruction: Add Edit Base TC: Description: •

All procedures are the same for the Task Cards, Modifications and Additional Jobs. To switch between them, use tabs Task Cards/Modifications/Additional Jobs/.

1. To add a new task card in a Tasks Source click on the ADD button.

2. Fill the text boxes in a Tasks Editor.

3. Click on button with plus to confirm an addition. Or press again the ADD button to reset the Editor.



Print Edit Bose WO Source Print Help	Permission: FULL CONTROL D: 1411; WO Close: Felse; WO: 201108-A0003; Cust.WO: 201108-A0003; A/C Reg: ES-F	_ (8)
Itesk Cards Modifications Additional Jobs NRC Template Selected Tasks: Found 30 Task Cards: Print Futer TC: Group: Reference: Note: Instruction: Instruction: Print Base TC: Description:	Found 1477 New Task Cards: Table: SourceEstonian737500 Filter TC: Group: Reference: Note: Instruction:	-
06-100-02 06-100-02 2M1 CLOSE BODY SECTION - ACCESS PAN 06-104-00 06-104-00 0D OPEN PASSENGER SEATS AND GAL 06-300-01 06-300-01 3A OPEN LEFT WING - ACCESS PANELS 06-300-02 06-300-02 3E CLOSE LEFT WING - ACCESS PANELS 06-303-00 06-303-00 0D OPEN LEFT WING - ACCESS PANELS 06-305-01 06-305-01 3B3 OPEN LH WING - FUEL TANK ACCESS 06-305-02 06-305-02 3B3 CLOSE LH WING - FUEL TANK ACCESS 06-400-01 06-400-01 4A OPEN RIGHT WING - ACCESS PANEL 06-400-02 06-400-02 4E CLOSE RIGHT WING - ACCESS PANEL 1	➤ 05-00-00-BMA1 05-00-00-BMA3 05-00-00-BMA3 0F INSP CARRY OUT 05-00-00-BMA3 05-00-00-BMA3 0F INSP DAMAGE CC 06-100-01 06-100-01 2A1 OPEN BODY SECT 06-101-01 06-101-01 2A2 OPEN FORWARD C 06-101-02 06-101-02 2M2 CLOSE FORWARD C 06-102-01 06-102-02 2M3 CLOSE FT CARGO 06-102-02 06-102-02 2M3 CLOSE AFT CARGO 06-103-01 06-103-02 1E3 CLOSE AFT CARGO 06-103-02 06-103-02 1E3 CLOSE PASSENGEF 06-103-03 06-103-02 1E3 CLOSE PASSENGEF 06-103-03 06-103-03 1E1 OPEN PASSENGEF 06-103-04 06-103-04 1E3 CLOSE PASSENGEF 06-103-04 06-103-04 1E3 CLOSE PASSENGEF	
Tasks Editor: Task Card Number: Group: * Job Type: * 06-403-00 0D 0PEN REFERENCE:	5 06-500-01 06-500-02 06-500-02 5G CLOSE LEFT POWE 06-500-02 06-500-02 5G CLOSE LEFT POWE 06-600-01 06-600-01 6G OPEN RIGHT POWE 06-600-02 06-600-02 6G CLOSE RIGHT POWE 06-700-02 06-700-02 6G CLOSE RIGHT POWE 06-700-01 06-700-02 7G OPEN EMPENNAG 07-000-01 07-000-02 0F SERV LIFT THE AIR 07-000-02 07-000-02 0F SERV SERVICE TH 12-013-21-03 B12-13-21-3A-1 5E SERV SERVICE TH 12-013-22-04 B12-13-21-3B-1 5E SERV SERVICE TH 12-013-22-04 B12-13-21-3B-2 6E SERV	ER VEI VEI SE SE RF E HE HE TH

4. To update a task card in Task Cards click on the EDIT button. To reset the Task Editor, click on the Edit button again.

5. Fill the text boxes and make changes.

6. Update current record by clicking on button with diskette, or click on the EDIT button again to reset the Editor.



	7
	Add Edit
🕅 WP Task List Editor	_ B ×
	Permission: FULL CONTROL ID: 1411; WO Close: False; WO; 201108-A0003; Cust WO; 201108-A0003; A/C Re I; ES-F
Close WO Source Print Help	
Z Task Cards Modifications Additional Jobs NRC Template	Tasks Source: Source: LineLibrary_AME
Selected Tasks:	Found 1477 New Task Cards: Table: SourceEstonian737500
Filter TC: Group: Reference: Note: Instruction:	Filter TC: Group: Reference: Note: Instruction:
	Base TC: Description:
Base TC: Description:	A A A A
06-100-02 06-100-02 2M1 CLOSE BODY SECTION - ACCESS PAI	05-00-00-BMA1 05-00-00-BMA1 12B INSP CARRY OUT A 05-00-00-BMA3 05-00-00-BMA3 0F INSP DAMAGE COT
06-300-01 06-300-01 3A OPEN LEFT WING - ACCESS PANELS	- 06-100-01 06-100-01 2A1 OPEN BODY SECTIC
06-300-02 06-300-02 3E CLOSE LEFT WING - ACCESS PANELS 06-303-00 06-303-00 0D OPEN LEFT WING - KRUEGER FLAPS	06-101-01 06-101-01 2A2 OPEN FORWARD C/ 06-101-02 06-101-02 2M2 CLOSE FORWARD C/
06-305-01 06-305-01 3B3 OPEN LH WING - FUEL TANK ACCES	06-102-01
06-305-02 06-305-02 3B3 CLOSE LH WING - FUEL TANK ACCESS	06-102-02 List of Found Tasks in Source 2-02 2M3 CLOSE AFT CARGO (
06-400-01 06-400-01 4A OPEN RIGHT WING - ACCESS PANEL 06-400-02 06-400-02 4E CLOSE RIGHT WING - ACCESS PANEL	06-103-01 06-103-01 1E1 OPEN PASSENGER 06-103-02 06-103-02 1E3 CLOSE PASSENGER ▼1
06-403-00 06-403-00 0D OPEN RIGHT WING - ACCESS PANEL	00-103-02 1E3 CLOSE PASSEINGER▼
06-405-01 06-405-01 4B3 OPEN RH WING - FUEL TANK ACCES	
06-405-02 06-405-02 4B3 CLOSE RH WING - FUEL TANK ACCES:	Tasks Editor:
72-054-00-01 C72-54-00-6A-1 5C INSP VISUALLY INSPECT THE LEFT	Task Card Number: * Base Task Card Number: * Group: * Job Type: *
72-054-00-02 C72-54-00-6A-2 6C INSP VISUALLY INSPECT THE RIGHT	06-103-03 06-103-03 1E1 OPEN -
72-056-00-01 C72-56-00-6A-1 5C INSP VISUALLY CHECK THE LEFT E 72-056-00-02 C72-56-00-6A-2 6C INSP VISUALLY CHECK THE RIGHT F	REFERENCE:
72-062-01-01 C72-62-01-6A-1 5D1 INSP VISUALLY CHECK THE LEFT E	Description: *
72-062-01-02 C72-62-01-6A-2 6D1 INSP VISUALLY CHECK THE RIGHT E	PASSENGER CABIN FLOORS - BS520 TO BS663- OPEN
72-063-00-01 C72-63-00-6A-1 5D1 INSP VISUALLY CHECK THE LEFT E	ASSENGER CABIN FLOORS - BS520 TO BS665- OPEN
72-063-00-01 C72-63-00-6A-2 6D1 INSP VISUALLY CHECK THE LEFT E	
73-011-00-01 C73-11-00-6A-1 5D1 INSP VISUALLY CHECK THE LEFT E	
73-011-00-02 C73-11-00-6A-2 6D1 INSP VISUALLY CHECK THE RIGHT E	Note: Skill:*
73-011-02-01 C73-11-02-4A-1 5E SERV REPLACE THE LEFT ENGINE F 73-011-02-02 C73-11-02-4A-2 6E SERV REPLACE THE RIGHT ENGINE	
73-011-04-01 C73-11-04-A-1 5C INSP VISUALLY INSPECT THE LEFT V	MECH 🖌
Related TC:	
Transfer Note Excel	E :TAT CRT E :CAT 3 C :CDCCL E :EWIS

7. To update a task card in a Tasks Source click on EDIT.

8. Make changes.

9. Update current record by pressing or click on the EDIT button again to reset the Editor.



5. WP Tasks List and Task Cards Printout.



Task Cards Mo	odifications Additiona	l Jobs	NRC Templat	te	. [-Tasks Source: Source: LineLibrary AME				*
elected Tasks	s:					Found 1477 New Task Card	s: Table:	SourceEst	onian73750	
ound 30 Task C	ards:			Print 📥	>					
Iter TC:	Group: Refer	ence:	Note:	Instruction:	<	Filter TC: Group	: Reference: Note:	Instru	uction:	
*		•	I *	t state sta				*	_	Add Edit
Base TC:	De	escriptio	n:	_		Base TC:	Description:	_		
· ·	I	<u> </u>			>>					
	06-100-02	2M1	CLOSE	BODY SECTION - ACCESS PAI		157-302-01-1	157-302-01-1	3B1	CPCP	CPCP - LEFT
	06-104-00	0D	OPEN	PASSENGER SEATS AND GAL	<<	157-302-01-2	157-302-01-2	4B1	CPCP	CPCP - RIGHT
	06-300-01	3A	OPEN	LEFT WING - ACCESS PANELS		157-302-04-1	157-302-04-1	3B1	CPCP	CPCP - LEFT
	06-300-02	3E	CLOSE	LEFT WING - ACCESS PANELS		157-302-04-2	157-302-04-2	4B1	CPCP	CPCP - RIGH1
	06-303-00	0D	OPEN	LEFT WING - KRUEGER FLAPS		157-305-01-1	157-305-01-1	3B3	CPCP	LEFT WING - (
	06-305-01	3B3	OPEN	LH WING - FUEL TANK ACCES		157-305-01-2	157-305-01-2	4B3	CPCP	RIGHT WING -
	06-305-02	3B3	CLOSE	LH WING - FUEL TANK ACCES		157-306-01-1	157-306-01-1	3B2	CPCP	LEFT WING - 1
	06-400-01	4A	OPEN	RIGHT WING - ACCESS PANEL		157-306-01-2	157-306-01-2	4B2	CPCP	RIGHT WING -
	06-400-02	4E	CLOSE	RIGHT WING - ACCESS PANEL		157-306-07-1	157-306-07-1	3B2	CPCP	CPCP - LEFT
	06-403-00	0D	OPEN	RIGHT WING - KRUEGER FLAP		157-306-07-2	157-306-07-2	4B2	CPCP	CPCP - RIGHT
	06-405-01	1B3	OPEN	RH WING - FUEL TANK ACCES:		157-306-08-1	157-306-08-1	3B2	CPCP	LEFT WING - F
	06-405-02	4B3	CLOSE	RH WING - FUEL TANK ACCES		157-306-08-2	157-306-08-2	4B2	CPCP	RIGHT WING -
		5C	INSP	VISUALLY INSPECT THE LEFT		L-AD87-08-09-ALL	L-AD87-08-09-ALL	2G1	INSP	INSPECT "INF
			INSP	VISUALLY INSPECT THE RIGHT		L-B12-40-01	L-B12-40-00	0C1	SERV	WHEEL WELL
2-056-00-01	C72-56-00-6A-1	5C	INSP	VISUALLY CHECK THE LEFT E		L-B25-60-00-G	L-B25-60-00-G	1F1	INSP	EMERGENCY
2-056-00-02	C72-56-00-6A-2	6C	INSP	VISUALLY CHECK THE RIGHT E		L-B25-60-08-A	L-B25-60-08-A	1C2	INSP	VISUALLY CH
	C72-62-01-6A-1	5D1	INSP	VISUALLY CHECK THE LEFT E		L-B26-21-31-2A	L-B26-21-31-2A	1C1	INSP	ENGINE FIRE
2-062-01-02	C72-62-01-6A-2	6D1	INSP	VISUALLY CHECK THE RIGHT E		L-B26-22-21-2A	L-B26-22-21-2A	1C1	INSP	APU FIRE EX
2-063-00-01	C72-63-00-6A-1	5D1	INSP	VISUALLY CHECK THE LEFT E		L-B26-23-02-ALL	L-B26-23-02-ALL	1C1	INSP	CARGO FIRE
2-063-00-02	C72-63-00-6A-2	6D1	INSP	VISUALLY CHECK THE RIGHT E		L-B38-32-00-A	L-B38-32-00-A	1F1	SERV	REPLACE ALI
3-011-00-01	C73-11-00-6A-1	5D1	INSP	VISUALLY CHECK THE LEFT E		L-B38-32-00-B	L-B38-32-00-B	1F1	SERV	REPLACE FLI
3-011-00-02	C73-11-00-6A-2	6D1	INSP	VISUALLY CHECK THE RIGHT E		L-B38-32-31-C	L-B38-32-31-C	1F1	SERV	REPLACE TH
3-011-02-01	C73-11-02-4A-1	5E	SERV	REPLACE THE LEFT ENGINE F		L-B38-32-31-D	L-B38-32-31-D	1F1	SERV	REPLACE TH
3-011-02-02	C73-11-02-4A-2		SERV	REPLACE THE RIGHT ENGINE		L-B38-32-31-E	L-B38-32-31-E	1F1	SERV	REPLACE LA
3-011-04-01	C73-11-04-A-1	5C	INSP	VISUALLY INSPECT THE LEFT 🚽		P12-200-00	P12-200-00	11	CPCP	WHEEL WELL
1										F

1 To print out a task card from Task Cards, highlight this task card.

2. Then click the PRINT button.



Close WO	Source	e Print	🎨 Help	Permission: FULL	CONTROL D: 1411; WO	Close: False; WO: 20	1108-A0003;	Cust.WO:	201108-A000	3; A/C Reg: ES-F	
Select WOID, EA WO Number, Task Group:					Tasks Source: Source: LineLibrary_AME Found 1477 New Task Cards: Table: SourceEstonian737500						
411 201108-A0003 411 201108-A0003	Front Page Task Cards	•		Filter TC:	Group:	Reference:	Note:	Instru		Add	Edit
411 201108-A0003	Modifications Additional Jobs	4		Ba	se TC:	Description:		_r	_	Auu	Euit
			5		01 02 01 02 03 04 04 01 02 01 02 01 02 01 02 21-03 21-04 22-03 22-03 22-04	05-00-00-BM 05-00-00-BM 06-100-01 06-101-02 06-102-01 06-102-02 06-103-02 06-103-02 06-103-02 06-103-04 06-500-01 06-500-02 06-500-02 06-500-02 06-500-02 07-000-01 06-500-02 07-000-01 07-000-02 07-000-01 07-000-02 07-000-01 07-000-02 07-000-01 07-000-02 07-000-01 07-000-02 07-000-01 07-000-02 07-000-01 08-12-13-21-33 B12-13-21-33 B12-13-21-33 B12-13-21-33	A-1 A-2 3-1 3-C1 3-2	12B 0F 2A1 2A2 2M3 1E3 1E3 1E3 1E3 5G 6G 7A 0F 5E 5E 6E 6E 6E	INSP OPENSE OPENSE OCLOENSE OSSERVE SER	PASSENG	COLOCY CTIC D C C C C C C C C C C C C C C C C C C

If you need to print out a maintenance visit tally sheet, a task card visit list, a list of alterations or a list of additional jobs, complete the following actions:


3. Click the PRINT tool button.

4. To print out a maintenance visit tally sheet, highlight a necessary work order's Front Page and click on the PRINT button (to view a maintenance visit tally sheet, see the picture no.4.1).

To print out a task cards visit list, highlight a necessary work order's Task Cards and click on the PRINT button (to view a task card visit list see the picture no.4.2).

To print out a list of alterations, highlight a necessary work order's Modifications and click on the PRINT button (to view a list of alterations, see the picture no.4.3).



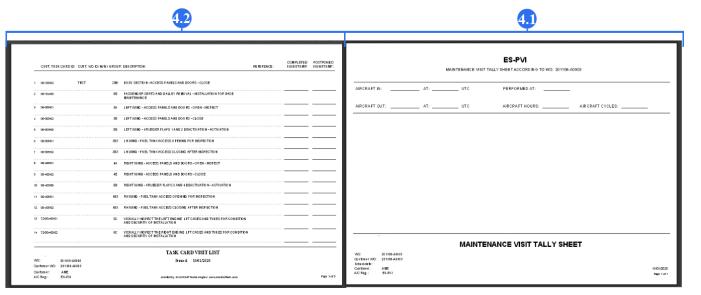

To print out a list of additional jobs, highlight a necessary work order's Additional Jobs and click on the PRINT button (to view a list of additional jobs see the picture no.4.4)

5. To exit the screen, click on the CANCEL button.