


Reports

User guidance

User Guidance

1. Reports

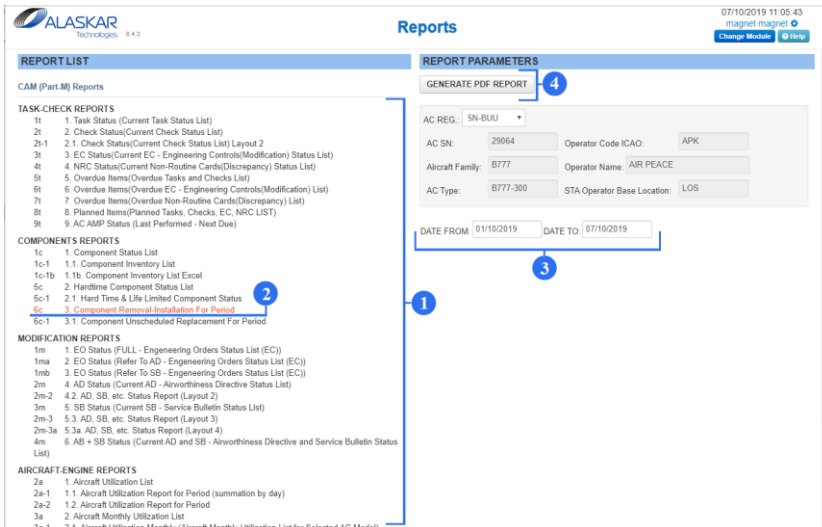

This application is connected directly with the desktop ALASKAR CAM (Part-M) and allows viewing and printing all necessary reports. Main screen of Reports Module consists of two sections:



- Report List;
- Report Parameters.

1. Report List contains Task-Check Reports, Components Reports, Modification Reports and Aircraft-Engine Reports.

1.1. Quantity of reports is depending on user's permission. It is set in User Registration module.

To Print a necessary report:

2. Selects any line from Report List.
3. Choose required Date From and Date To.
4. Press button "Generate PDF Report". After generation is finished the "Generate PDF Report" button goes to the green "Open Report" one.

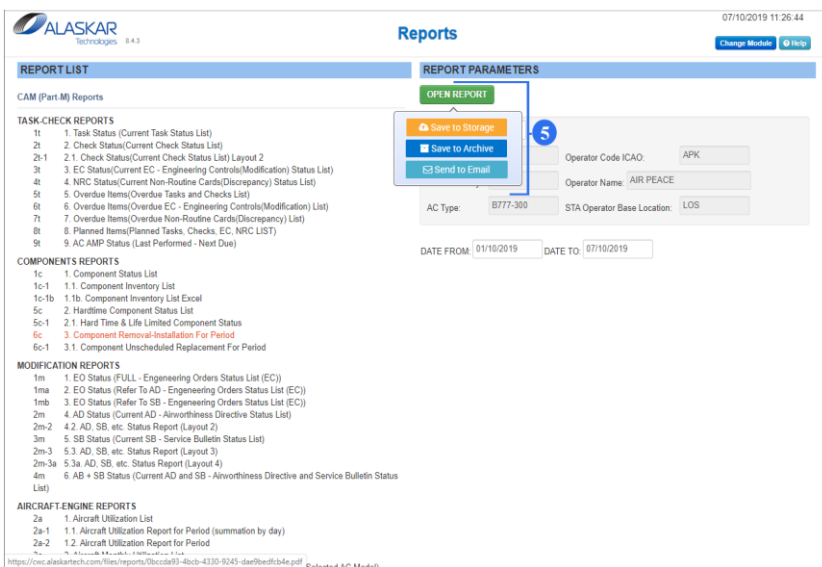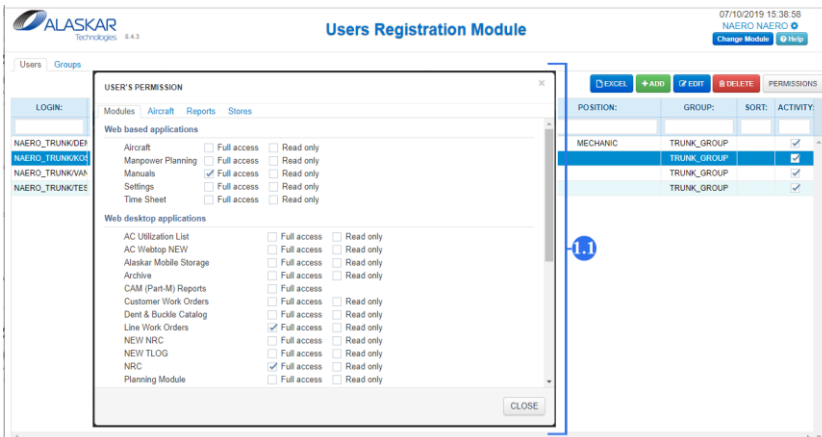

5. Press this button to Open print out form. Move Cursor over button "Open Report". Options "Save to Storage", "Save to Archive" and "Send to Email" will appear. Press one of the options to perform the action.